


1-800-KEATING • keatingofchicago.com

REPLACING PART #032242 (Lighted Rocker Switch) WITH PART #058328 (Non-lighted Rocker Switch)

Please select the wiring diagram for your fryer and wire the new switch as shown. If the wiring version for your switch is not shown, please call 1-800-KEATING. Have your model and serial numbers available.

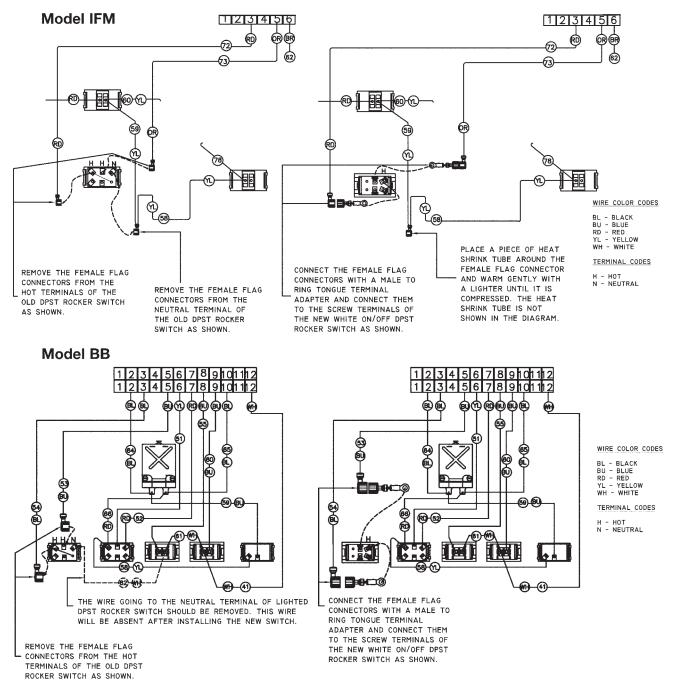


1



1-800-KEATING • keatingofchicago.com

REPLACING PART #032242 (Lighted Rocker Switch) WITH PART #058328 (Non-lighted Rocker Switch)

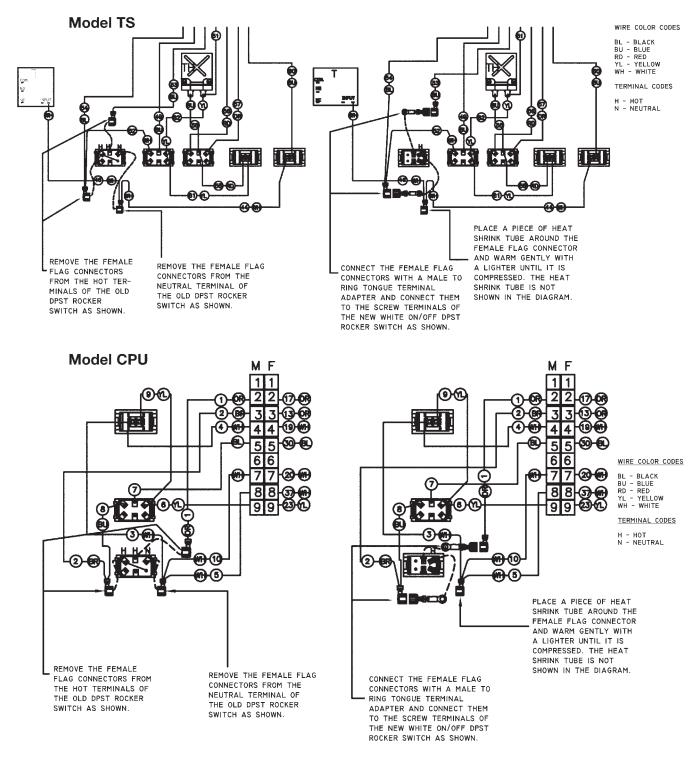

2