




SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

INSTALLATION OF REPLACEMENT 28V LIGHT

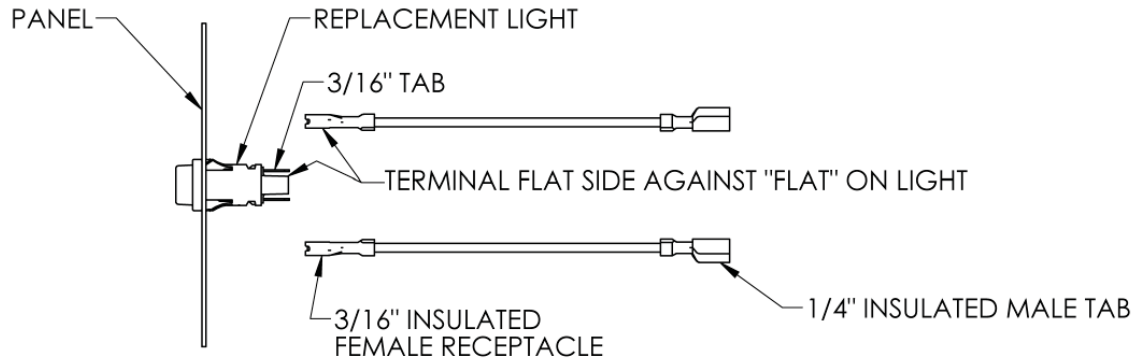

1. Shut off equipment power, disconnect live voltage from panel before replacing light.
2. Disconnect wire terminals from defective light; use care to avoid pulling wire out of terminal. Replace terminal if necessary.
3. Remove defective light from panel.
4. Install new light on panel.
5. Push on 3/16" terminal from each wire assembly, flat side of terminal on light "flat". Press firmly until terminal is fully seated.
6. Re-install original harness terminals (1/4") on to new wire assembly 1/4" tabs. Insure terminals are fully seated. The light is non-polarized, either color wire from original harness may be installed on either new wire assembly.
7. Use a tie-wrap to help organize wires if necessary.
8. Turn fryer on to test new light operation.