



# SERVICE INSTRUCTIONS

---

1-800-KEATING • keatingofchicago.com

## REMOVAL AND REPLACEMENT OF PIEZO SPARK IGNITOR

### Removal:

1. Locate the electrode end of the ignitor and disconnect the wire lead.
2. Remove the screw holding the electrode mounting bracket and remove the bracket.
3. From the inside of the control panel locate the nut holding the Piezo assembly and remove it by turning it counterclockwise until it disengages.
4. Remove the Piezo ignitor body from the control panel.

### Replacement:

1. Install the Piezo control body in the same fashion as removed and tighten the nut on the backside of the control panel.
2. Install the electrode mounting bracket.
3. Reattach the wiring and inspect to make sure that a good connection has been established both at the body end of the ignitor and the electrode end.
4. Test the operation of the ignitor by pushing the red button on the front of the control panel. To assure that a spark strikes the pilot hood, the electrode may require adjustment. If necessary, loosen the electrode screw and adjust the electrode.