



SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

REMOVAL AND REPLACEMENT OF THERMOPILE FOR GAS GRIDDLE PART #022770*

When the removal of the thermopile presents a challenge due to the lack of working area available, the following steps will help expedite the removal and replacement.

Removal:

1. Turn manual gas valve off.
2. Allow griddle to cool down to a safe working temperature.
3. Remove control panel by removing four screws and support the panel to prevent damage to wiring or other components.
4. Disconnect pilot tube from gas valve and carefully bend the tube to the side; do not kink tube.
5. Unscrew thermopile connection from gas valve.
6. Using a 7/16" wrench to loosen the thermopile hold down nut and then remove thermopile.

Replacement:

1. Use thread lock on the threads of the nut on the thermopile.
2. Insert thermopile bulb into the bracket and tighten nut up until you feel no more slop in the thermopile. Then stop.
3. Run the wire leads of thermopile over to the gas valve and connect as shown below.
4. Reinstall pilot tube to the gas valve.
5. Reinstall control panel with four screws.
6. Turn on manual gas valve and start griddle.

*THIS THERMOPILE PART #022770 REPLACES THE THERMOPILE PART #002567.

