




SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

TROUBLESHOOTING GAS VALVE PART # 021675 (NATURAL)

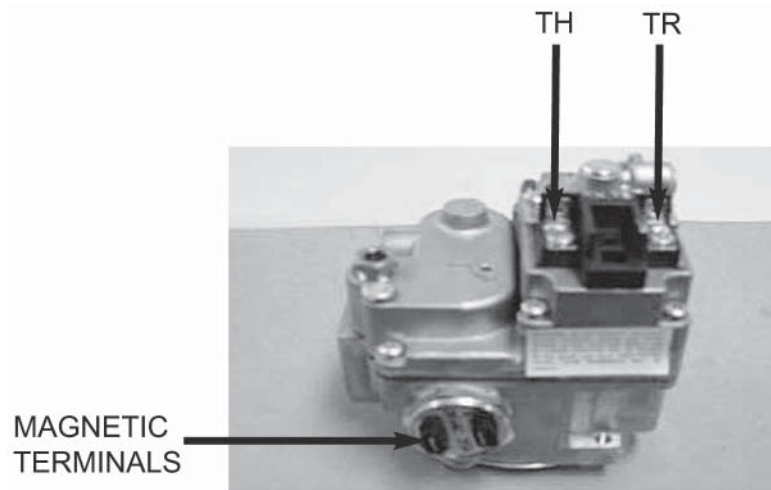

GAS CONTROL VALVE

To check Resistance of the gas valve, disconnect the wires going to the valve.

1. Resistance between the TH & TR terminals must be $72 \Omega \pm 4 \Omega$
2. Resistance between the Magnetic Terminals must be more than 1 million Ω

If resistance is outside of specifications listed, the gas valve must be replaced.