





SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

INSTALLATION OF REPLACEMENT 28V LIGHT

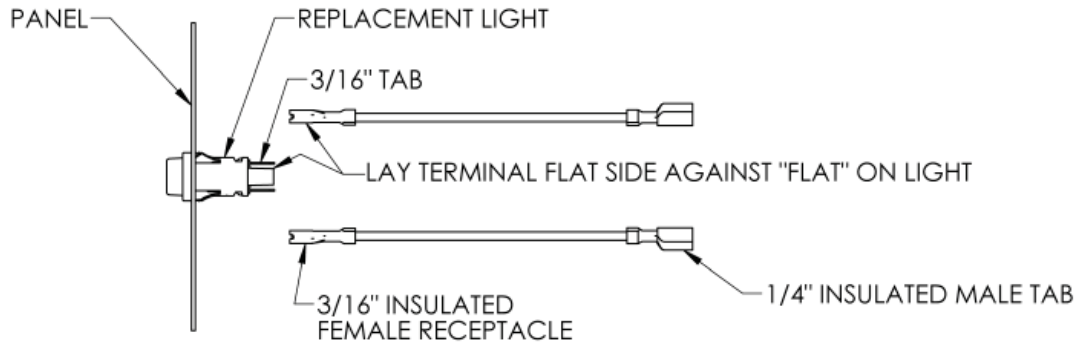

ISO LINEUP VIEW

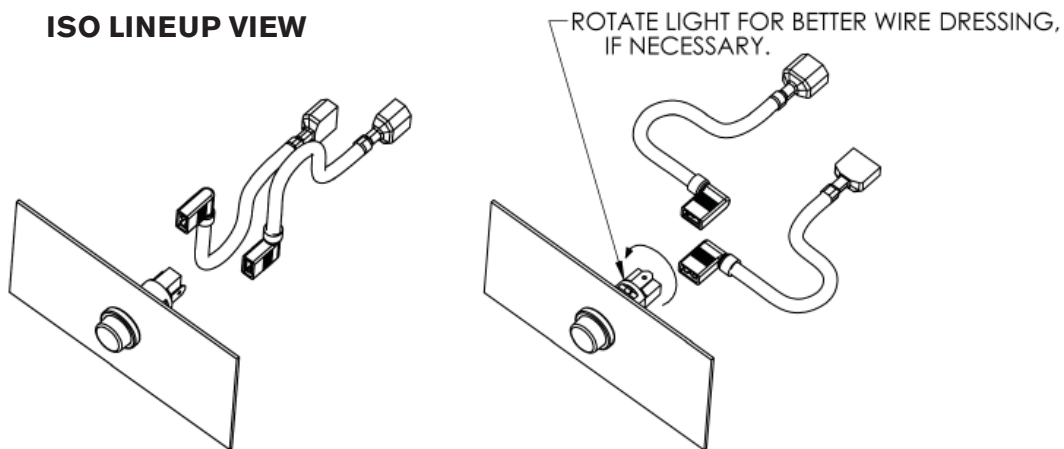

1. Shut off equipment power, disconnect live voltage from panel before replacing light.
2. Disconnect wire terminals from defective light; use care to avoid pulling wire out of terminal. Replace terminal if necessary.
3. Remove defective light from panel.
4. Install new light on panel.
5. Push on 3/16" terminal from each wire assembly, flat side of terminal on light "flat". Press firmly until terminal is fully seated.
6. Re-install original harness terminals (1/4") on to new wire assembly 1/4" tabs. Insure terminals are fully seated. The light is non-polarized, either color wire from original harness may be installed on either new wire assembly.
7. Rotate light in panel, if necessary, to prevent wires from interfering with panel closure onto surround.
8. Use a tie-wrap to help organize wires if necessary. Turn fryer on to test new light operation.