




SERVICE INSTRUCTIONS

1-800-KEATING • keatingofchicago.com

FIELD REPLACEMENT KIT TRANSFORMER 062880

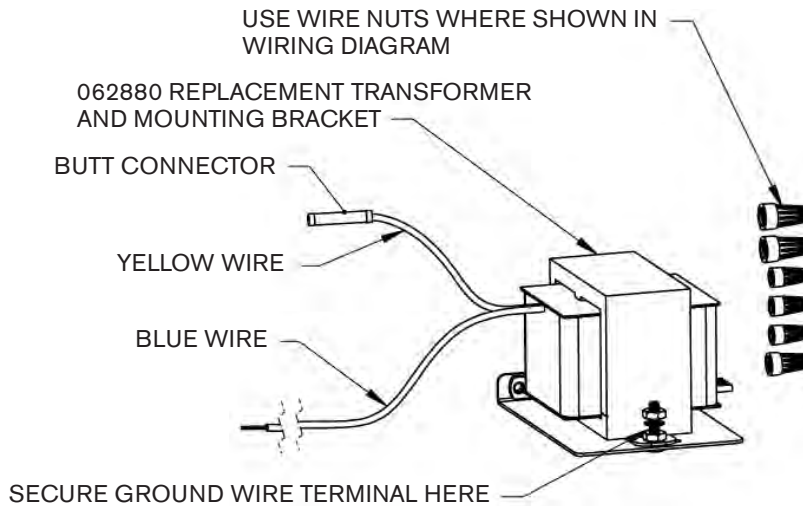

INSTRUCTIONS:

1. Turn the unit's ON/OFF switch to OFF. Remove all electrical power from the unit to prevent possible electric shock.
2. Disassemble the Basket-Lift Power Supply.
3. Note the wire colors and their connections from the 058359 transformer.
4. Locate the YEL (yellow) wire from the 058359 transformer that is solder-connected to the Bridge Rectifier lead. Measure about 2" from the rectifier and cut this lead.
5. Disconnect the remaining wires from the 058359 transformer. Remove the transformer and its bracket from the power supply assembly.
6. Install the new 062880 transformer and bracket into the power supply assembly.
7. Insert the stripped end of the yellow wire from the Bridge Rectifier into the open end of the butt connector on the YEL (yellow) wire of the new transformer. Crimp to make a permanent connection. Perform a pull test to insure that the wire has been properly crimped.
8. Using the supplied wire nuts, re-connect the remaining transformer wires as they were originally connected to the unit (use the correct wire colors as shown on the wiring diagram). Make certain to cap off the unused wires with the gray wire nuts (supplied).
9. Check work, re-assemble and test for proper operation.

WIRING DIAGRAM

